

No.	from	(Path)	Part No.	to	Part No.	Cross-section	Colour	
							Basic	Coding
42	Plug board, engine side		(24a) --	Screenwasher pump —	(25)	0.75	brown	black
43	Plug board, engine side		(24a) --	Screenwasher pump +	(25)	0.75	green	black
44	Plug board, engine side		(24a) --	Starter 50	(18)	2.5	black	
45	(with automatic transmission: starter relay 87)							
46	Primary resistance		(11) --	Coil 16	(10)	1	black	red
47	Coil 1		(10) --	Plug "k" on instr. panel No. 7	(35)	0.75	black	
48	Starter 16		(18) --	Coil 16	(10)	1	black	red
49	Coolant temperature contact		(16) --	Plug "k" on instr. panel No. 8	(35)	0.75	brown	white
50	Fusebox, input 6		(55) --	Plug "k" on instr. panel No. 5	(35)	0.75	green	
51	Oil pressure switch		(15) --	Plug "k" on instr. panel No. 2	(35)	0.75	brown	white
52	Coil 1		(10) --	Contact breaker	(12)	1.5	black	
53	Brake fluid level switch		(19) --	Plug board, engine side	(24a)	0.75	brown	blue
54	Brake fluid level switch		(19) --	Ground		0.75	brown	
55	Fusebox, input 1		(55) --	Plug board, passenger side	(24b)	0.75	grey	black
56	Fusebox, input 2		(55) --	Light switch 58 L	(31)	0.75	grey	black
57	Fusebox, input 3		(55) --	Light switch 58 K	(31)	0.75	grey	
58	Fusebox, input 3		(55) --	Light switch 58 R	(31)	0.75	grey	green
59	Fusebox, input 4		(55) --	Plug board, passenger side	(24b)	0.75	grey	green
60	Fusebox, output 4		(55) --	Plug board, passenger side	(24b)	1.5	red	
61	Fusebox, input 6		(55) --	Hazard warning flasher switch 30	(43)	1.5	red	white
62	Fusebox, input 8		(55) --	Load-shedding relay 86	(52)	0.75	green	
63	Fusebox, input 7		(55) --	Load-shedding relay 87	(52)	2.5	green	red
64	Fusebox, input 10		(55) --	Ignition/starter switch 15	(48)	4	green	
65	Fusebox, input 10		(55) --	Ignition/starter switch R	(48)	2.5	violet	
	(fed back to cable harness)			Connection for radio	(73)	0.75	violet	
66	Fusebox, output 1		(55) --	(under stowage compartment floor)				
67	Fusebox, output 2		(55) --	Rear light, left	(66)	0.75	grey	yellow
68	Fusebox, output 2		(55) --	Connection for luggage compartment light	(72)	0.75	grey	red
69	Fusebox, output 3		(55) --	Light switch 58a	(31)	0.75	grey	red
70	Fusebox, output 4		(55) --	Rear light, right	(65)	0.75	grey	white
71	Fusebox, output 4		(55) --	Interior light +	(59)	0.75	red	white
72	Fusebox, output 5		(55) --	Clock +	(39)	0.75	red	white
73	Fusebox, output 6		(55) --	Cigar lighter +	(41)	1.5	red	white
74	Fusebox, output 7		(55) --	Delay relay 15	(54)	1.5	green	yellow
75	Fusebox, output 7		(55) --	Hazard warning flasher switch 15	(43)	1	green	black
				Reversing light switch	(36)	1	green	white
				(with automatic transmission gearbox switch 15)				
76	Fusebox, output 7		(55) --	Plug board, passenger side	(24b)	1.5	green	white
77	Fusebox, output 8		(55) --	Switch for heater rear window +	(45)	1	green	blue
78	Fusebox, output 9		(55) --	Heater plug connection	(69)	2.5	green	brown
79	Plug board, passenger side		(24b) --	Plug "l" on instr. panel No. 8	(35)	0.75	brown	blue