



25 11 000 Removal and fitting of gearshift lever —ZF gearbox S 4-18/3—

Push up bellows and foam insert.
Take out circlip.

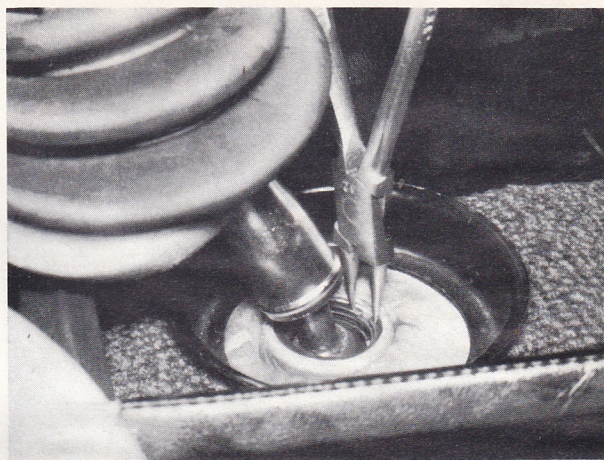


Pull out gearshift lever.
Note when assembling: Fit in gear lever ball with Longterm 2 grease.

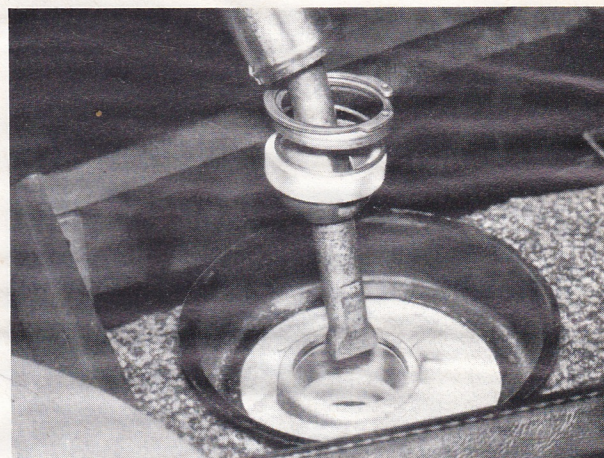


—Getrag gearbox 262—


Push up bellows and foam insert.
Take out circlip.
Screw out threaded bolt (1).
Press out cylindrical stud (2).

Note when assembling: Apply Longterm 2 grease on bearing bushes.
Check sliding sleeves for wear and replace if necessary.
Secure cylindrical stud in centre bore by means of threaded bolt.

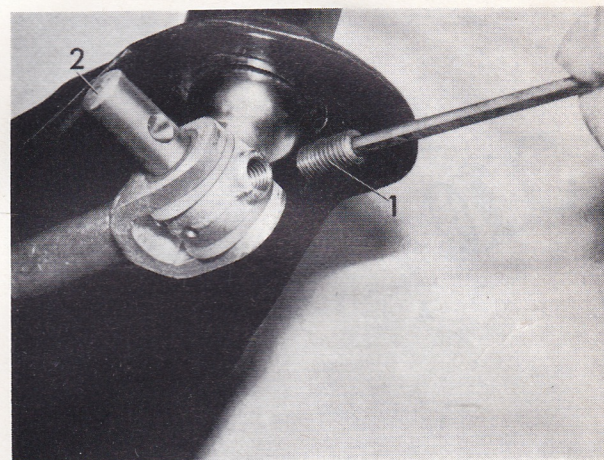

Pull out gear shift lever.
Note when assembling: Fit in gear lever ball with Long-term 2 grease.

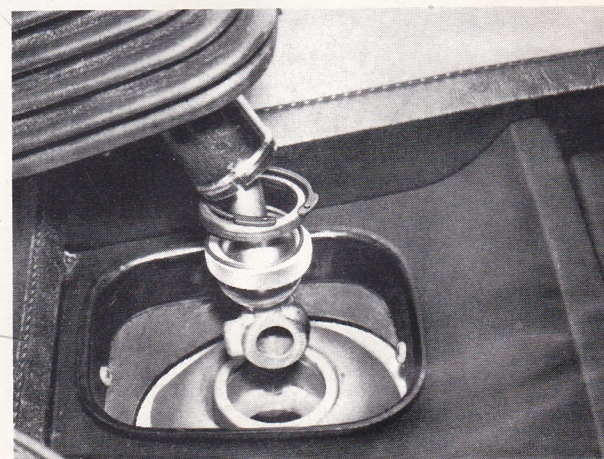

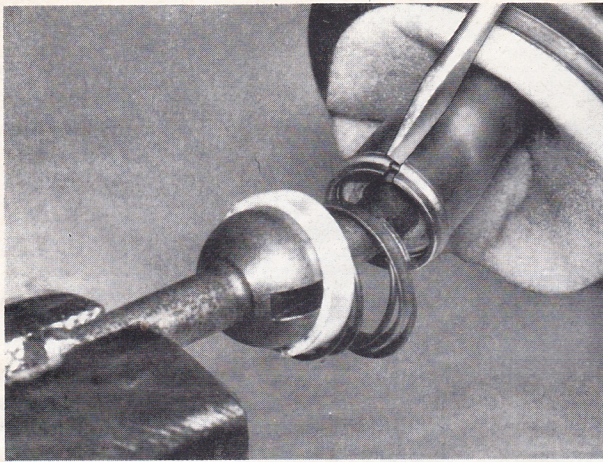


25 11 011 Replacement of rubber rings in gearshift lever

Removal and fitting of gearshift lever cf. 25 11 000.

Take out wire spring ring.


Pull off gearshift lever.

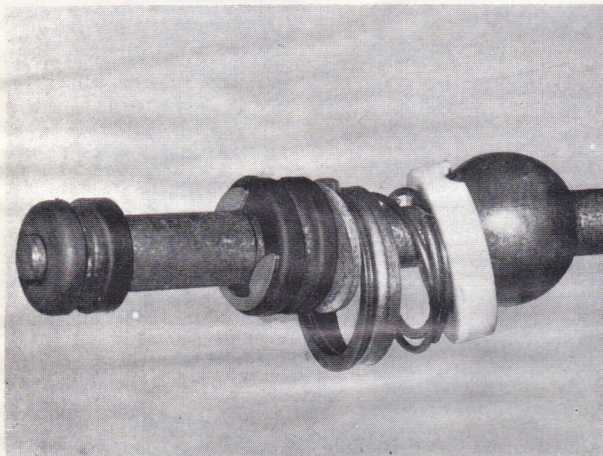

Pull off rubber ring.

Take off circlip.

Replace rubber rings.

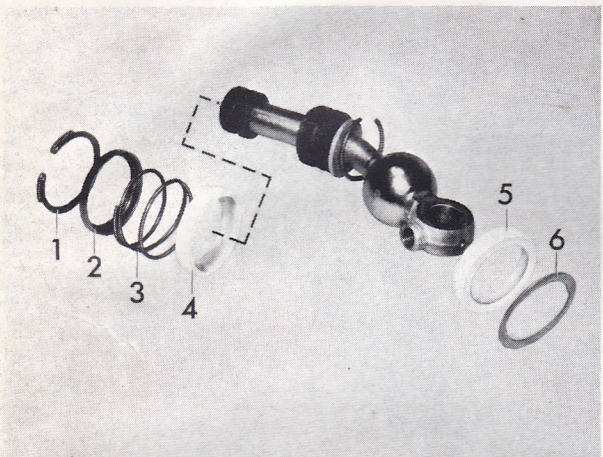

25 11 041 Replacement of ball cups for gearshift lever

Remove gearshift lever cf. 25 11 000.

Take off wire spring ring.

Pull off gearshift lever.

Arrangement of individual parts when assembling:

Circlip (1), spacer (2), pressure spring (3), ball cup (4), ball cup (5), and washer (6).

Apply Longterm 2 grease on ball cups.

