

BMW 2000 C/CA/CS

- 1 Turn indicator front RH
- 2 Headlight RH
- 3 Long-range headlight RH
- 4 Parking light RH
- 5 Parking light LH
- 6 Long-range headlight LH
- 7 Headlight LH
- 8 Turn indicator front LH
- 9 Dip relay
- 10 Dipswitch with headlight flasher
- 11 Light switch
- 12 Engine compartment light switch
- 13 Engine compartment light
- 14 Horn RH
- 15 Horn LH
- 16 Horn relay
- 17 Horn ring
- 18 Fuse box
- 19 Alternator
- 20 Voltage regulator
- 21 Coil
- 22 Distributor
- 23 Starter
- 24 Battery
- 25 Reversing light switch
- 26 Stop light switch
- 27 Heated rear window switch
- 28 Screenwiper motor
- 29 Screenwiper switch
- 30 Selector gate light

- 31 Screenwasher pump
- 32 Delay relay
- 33 Heater switch
- 34 Heater blower motor
- 35 Cigar lighter
- 36 Flasher unit
- 37 Turn indicator/parking light/
screenwasher switch
- 38 Oil pressure contact
- 39 Water temperature thermocouple
- 40 Plug-in connector
- 41 Electric window lift front RH
- 42 Terminal board
- 43 Front window lift switch
- 44 Terminal board
- 45 Electrical window lift front LH
- 46 Electric window lift rear RH
- 47 Terminal board
- 48 Rear RH window lift switch
- 49 Rear LH window lift switch
- 50 Terminal board
- 51 Electric window lift rear LH
- 52 Fuel gauge tank contact
- 53 Interior light
- 54 Door switch RH
- 55 Door switch LH
- 56 Luggage compartment light switch
- 57 Luggage compartment light
- 58 Heated rear window

- 59 Plug-in connector
- 60 Turn indicator rear RH
- 61 Rear light RH
- 62 Stop light RH
- 63 Reversing light RH
- 64 Number plate lights
- 65 Reversing light LH
- 66 Stop light LH
- 67 Rear light LH
- 68 Turn indicator rear LH
- 69 Choke cable contact
- 70 Ignition/starter switch
- 71 Radio
- 72 Separate fuse
- 73 Combined instrument
- 74 Revolution counter
- 75 Speedometer
- 76 Clock
- 77 Rear loudspeaker

Instruments:

- a Instrument lighting
- b Cooling water thermometer
- c Fuel gauge
- d Oil pressure telltale
- e Choke and fuel reverse telltale
- f Battery charge telltale
- g Main beam telltale
- h Turn indicator telltale

Ignition / starter switch:

Key positions:

- I Lock
- II Garage
- III Fahrt (Drive)
- IV Start

Fuses:

1-2-3-4-5-6 = 8 Amp

7-8 = 25 Amp

Firing order: 1-3-4-2

Cable coding:

0.75 sq. mm cross-section

Colour:

- BL = blue
- BR = brown
- GE = yellow
- GN = green
- GR = grey
- LI = lilac
- RT = red
- SW = black
- WS = white

Items 27-28-59-71-72-77 = Special equipment

Item 30 only when automatic gearbox fitted

X = When manual gearbox is fitted,
connected to instrument lighting;
cable for selector gate light is then free.