


I have Fat Mat under all the carpet.

See - Reverse

ITEM
NO

NUMBER EACH ITEM

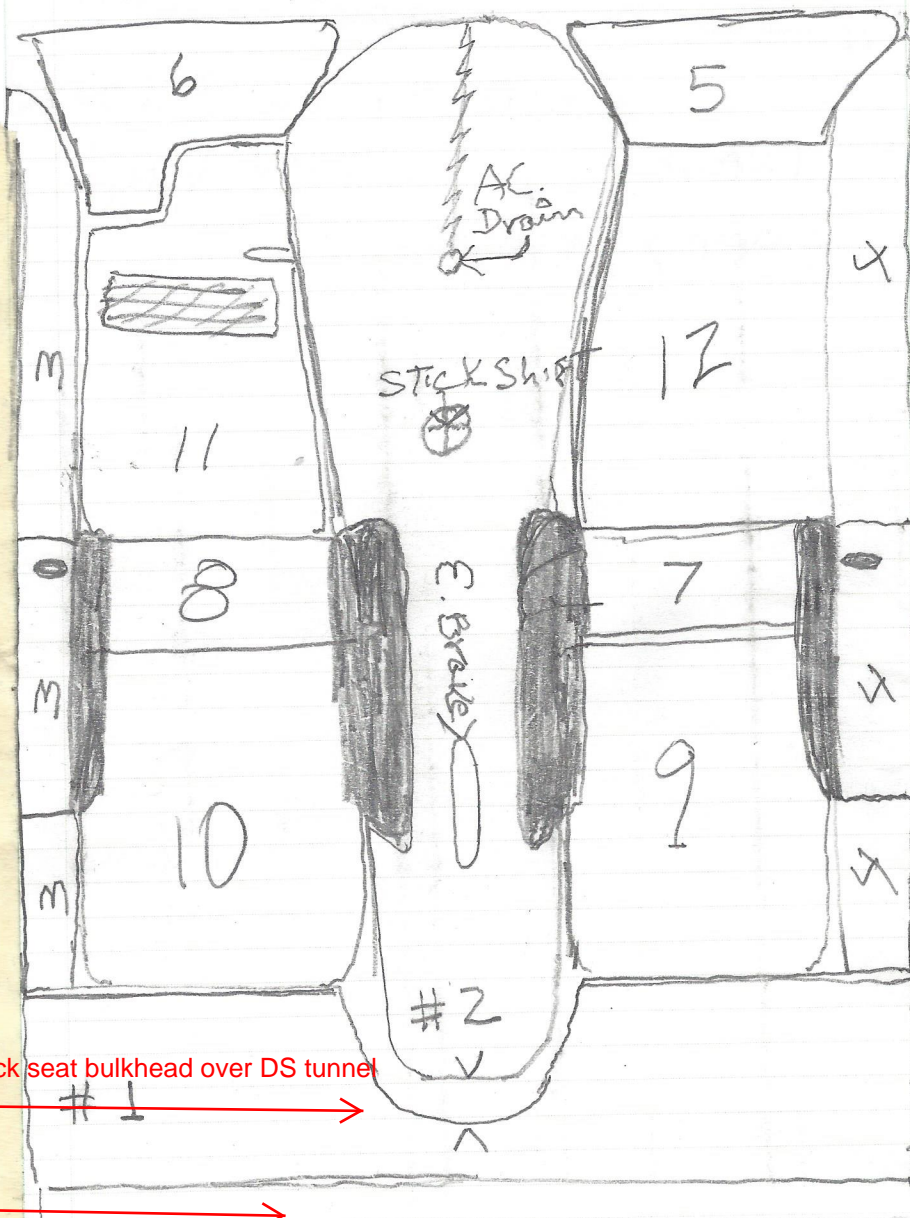

Vertical install carper back seat bulkhead over DS tunnel

Vinyl piece install over sheet metal horizontal edge
and down the aft part of the vertical bulkhead.

Order installation

1-2-3-4-5-6-7-8-9-10-11-12