



# Electrical wiring diagram BMW 2800 CS / 2800 CS Automatic

1 Turn indicator, front right	57 Plug board, 4-pole	97 Window lift motor, rear right
2 Low beam headlight with parking light, right	58 Plug board, 5-pole	98 Switch 6 for window lift
3 High beam headlight, right	59 Fusebox	99 2-pole plug board
4 Horn, right	60 Selector gate illumination	100 3-pole terminal
5 Horn, left	61 9-pole plug for direction switch	101 Window lift motor, front right
6 Engine compartment light	62 Direction switch	102 Fuel gauge float
7 Connection for engine compartment light	63 6-pole plug for dip switch	103 Rear light, right
8 Switch for engine compartment light	64 Switch for heated rear window	a) turn indicator
9 High beam headlight, left	65 Hazard warning flasher switch	b) rear light
10 Low beam headlight with parking light, left	66 Door-operated switch, right	c) stop light
11 Turn indicator, front left	67 Ignition/starter switch	d) reversing light
12 Horn relay	68 Stop light switch	104 Earth (ground)
13 High beam relay	69 Horn ring	105 Licence plate lighting
14 Regulator	70 Dip switch	106 Rear fog warning light
15 Connection for fog light relay	71 Switch for window lift	107 Rear light, left
16 Brake fluid level telltale	72 Switch for window lift	a) turn indicator
17 Solder tag	73 Socket for ignition/starter switch	b) rear light
18 Battery, 12 V	74 Hazard warning flasher unit	c) stop light
19 Starter	75 Connection for electric sliding roof	d) reversing light
20 Alternator	76 Earth (ground)	108 Connection for electric fuel pump
21 Remote thermometer contact	77 Connection for trailer turn indicators	
22 Automatic choke, front	78 Connection for power driven radio aerial	
23 Automatic choke, rear	79 Window lift motor, front left	
24 Oil pressure contact	80 3-pole terminal	
25 Distributor	81 2-pole plug board	
26 Coil	82 Door-operated switch, left	
27 Series resistor	83 Connection for rear loudspeaker	
28 Screenwasher pump	84 Switch for luggage compartment light	
29 Heater blower motor	85 Luggage compartment light	
30 Heater plug connection	86 3-pole terminal	
31 Reversing light switch	87 Switch 5 for window lift	
32 Gearbox switch (Automatic only)	88 Window lift motor, rear left	
33 Socket for gearbox switch (Automatic only)	89 Handbrake contact	
34 Plug for gearbox switch (Automatic only)	90 Interior light	
35 Starter relay (Automatic only)	91 Heated rear window	
36 Wiper motor	92 Switch 2 for window lift	
37 Delaying relay	93 Wiper speed control	
	94 Cigar lighter	
	95 3-pole terminal	
	96 Switch 4 for window lift	




Terminal tag  
(cable end tinned)




Screw connection  
(cable shoe)

Circular plug-in sleeve



Circular

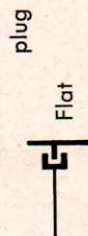

plug

Flat

Flat plug-in sleeve